

Ademco 4110DL/First Alert FA110C Program Sheet

- | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>*45 Phone Sys Select 1 </p> <p>*46 Sescoa/Radionics Select 0 </p> <p>*47 15 Sec Burg Dial Delay 0 </p> <p>*48 Periodic Test Message 0 </p> <p>*49 Split/Dual Reporting 0 </p> | <p>0 = Pulse Dial
1 = DTMF Dial
2 = Pulse Dial, CS on Watts Line
3 = DTMF Dial, CS on Watts Line</p> <p>0 = Radionics
1 = Sescoa</p> <p>0 = No
1 = Yes</p> <p>0 = None
1 = 24 Hours
2 = Weekly</p> | <p><u>To Primary Phone</u>
0 = All Reports
1 = Alarms, Restore, Cancel
2 = All Reports except Open/Close, Test
3 = Alarms, Restore, Cancel
4 = All Reports except Open/Close, Test
5 = All Reports (Dual Reporting)</p> <p><i>The following values are only available with very new 4110DL's, use 6 if programming Pagers</i>
6 = All reports except Open/Close
7 = All reports
8 = All reports
9 = All reports except Open/Close</p> |
| <p>*50 Keypad Medical/Fire 1 1 & *
 1 3 & #</p> <p>*51 Zone 1 Report Code 1 0 </p> <p>*52 Zone 2 Report Code 1 0 </p> <p>*53 Zone 3 Report Code 1 0 </p> <p>*54 Zone 4 Report Code 1 0 </p> <p>*55 Zone 5 Report Code 1 0 </p> <p>*56 Zone 6 Report Code 1 0 </p> <p>*57 Zone 7 Police Panic Report Code 1 0 </p> <p>*58 Zone 8 Duress Report Code 1 0 </p> <p>*59 Zone 9 Tamper Report Code 0 0 </p> <p>*60 Trouble Report Code 1 0 </p> <p>*61 Bypass Report Code 0 0 </p> <p>*62 AC Loss Report Code 1 0 </p> <p>*63 Low Bat Report Code 1 0 </p> <p>*64 Test Report Code 0 0 </p> <p>*65 Open Report Code 0 </p> <p>*66 Close Report Code 0 </p> <p>*68 Cancel Report Code 1 0 </p> <p>*69 Group Restores Trouble/Bypass 0 </p> <p>*70 Alarm Restore Code 0 </p> <p>*71 Trouble Restore Code 0 0 </p> <p>*72 Bypass Restore Code 0 0 </p> <p>*73 AC Restore Code 0 0 </p> <p>*74 Low Bat Rest Code 0 0 </p> <p>*93 Reports Per Armed Period 0 </p> | <p><u>To Secondary Phone</u>
Backup only
All Other Reports
Open/Close, Test
All Reports
All Reports
All Reports</p> <p>Alarms, Open/Close, Troubles
Alarms, Troubles
Alarms, Open/Close, Troubles
Alarms, Open/Close for Users 5-25, Troubles</p> <p>(Silent, sends 95, use as Medical Panic)
(Audible, sends 96, use as Fire Panic)</p> <p>0 = 10 Reports
1 = Unlimited</p> | |

Monitronics Monitoring and Service: 1-800-447-9239

Ademco 4110DL/First Alert FA-110C Quick Reference Guide

Arm Away	User Code + AWAY (2), the ARM light will turn on and the display will show AWAY <i>Note:</i> If system shows NOT READY press * to view open zones
Arm Stay	User Code + STAY (3), the ARM light will turn on and the display will show STAY
Disarming / Silencing Alarms	User Code + OFF (1) If turning off an alarm enter User Code + OFF (1) again to clear display
Instant Doors	User Code + INSTANT (7) to arm system All Entry/Exit doors will arm with no entry delay and all motion or interior zones will be bypassed (The Exit Delay is still active with this command)
Zone Bypassing	User Code + BYPASS key (6) + Zone (01, 02, 03 ...). The display will show BYPASS and the zone bypassed <i>Note:</i> Fire/Smoke Detector Zones cannot be bypassed
User Codes	1. MASTER CODE + CODE key (8) 2. Enter User program (2 to 7) 3. Enter desired User Code To delete a User Code 1. MASTER CODE + CODE key (8) 2. Enter User to delete (2 to 7) then wait 3. After 3 seconds the keypad will beep and erase the code <i>Note:</i> Master Code can only be changed by Service Technician or Remote Downloading (Older systems may only have Users 2 to 5) (System will beep once when completed)
Door Chimes	User Code + CHIME (9), if activated the display will show CHIME
Trouble Display	NO AC = Loss of AC power to the system LOW BAT = Main panel has a low battery, if LOW BAT appears with a zone number that zone has low battery CHECK = There is a problem with a Zone, fire zone or the main system wireless receiver (if applicable)
Panic Buttons	By holding down a combination of numbers will activate the Police, Fire and Medical Panics Press * and # at same time for Police Panic Press 1 and * at the same time for Fire Panic Press 3 and # at the same time for Medical Panic <i>Note:</i> The Fire and Medical Panics may be reversed or disabled on some systems

Do not pause more than 2 seconds between each keypress or system will ignore above commands