

Ademco 4110DL/First Alert FA110C Program Sheet

- Enter Program 1. Master Code + 8 + 0 + 0 (Display should show 20)
or
2. Power down then back up and press * and # within 1 minute
- Move to Location * + Location
- View Location # + Location (Display will read off one digit at a time)
- Exit Program 1. *98 OR 2. *99 if needing to re-enter programming later by Code + 8 + 00


- *20 Master Code | 0 | 0 | 0 | 0 | (Default is 4110)
- *21 Quick Arm Enable | 1 | 0 = No
1 = Yes
- *22 Keyswitch Enable | 0 | 0 = No
1 = Yes
- *23 Force Bypass Enable | 0 | 0 = No
(Not available on older models) 1 = Yes
- *27 Audible Exit Warning | ? | 0 = No
1 = Yes
- *28 Confirmation of Arming Ding | 0 | 0 = No
1 = Yes
- *29 Fire Sounder No Timeout | 1 | 0 = No
1 = Yes
- *30 Alarm Bell Timeout | 2 | 1 = 4 minutes
2 = 8 minutes
3 = 12 minutes
4 = 16 minutes
- *31 Zone 1 Definition | ? | 0 = Zone Disabled
1 = Entry/Exit
- *32 Zone 2 Definition | ? | 3 = Instant/Perimeter
4 = Interior/PIR
- *33 Zone 3 Definition | ? | 5 = Trouble by Day
6 = 24 hr Silent (Holdup)
- *34 Zone 4 Definition | ? | 7 = 24 hr Audible (Police Panic)
8 = 24 hr Auxiliary (Medical)
- *35 Zone 5 Definition | ? | 9 = Fire
(Smoke Detectors MUST use this Zone) 10 = Interior w/Delay (new 4110DL's only)
- *36 Zone 6 Definition | ? |
- *37 Zone 7 Definition (Panic * & #) | 7 | 7 = Audible Panic
6 = Silent Panic
- *38 Entry Delay | 2 | 1 = 20 seconds
Exit Delay = Entry + 15 seconds 2 = 30 seconds
3 = 45 seconds
4 = 60 seconds
5 = 90 seconds
- *39 Zone 3 Response to Open | 0 | 0 = 400ms
1 = 10ms
- *40 PABX Access Code | | (If 9 is needed to dial add here)
- *41 Primary Phone (12 digits) | |
End Phone Number with * # + 11 = * # + 12 = # # + 13 = 2.5 second pause
- *42 Secondary Phone (12 digits) | |
(Pager only available on VERY new 4110-DL's, pager will not work if Account starts with 0)
- *43 Subscriber Account | |
(Hex A = # + 10 B = # + 11 C = # + 12 D = # + 13 E = # + 14 F = # + 15)
- *44 Report Format | 7 | 0 = 3/1, 4/1 Ademco L/S Standard
1 = 3/1, 4/1 Radionics Standard
2 = 4/2 Ademco L/S Standard
3 = 4/2 Radionics Standard
6 = 4/2 Ademco Express
7 = Contact ID
8 = 3/1, 4/1 Ademco L/S Expanded
9 = 3/1, 4/1 Radionics Expanded

Ademco 4110DL/First Alert FA110C Program Sheet

- | | | |
|--|---|--|
| <p>*45 Phone Sys Select 1 </p> <p>*46 Sescoa/Radionics Select 0 </p> <p>*47 15 Sec Burg Dial Delay 0 </p> <p>*48 Periodic Test Message 0 </p> <p>*49 Split/Dual Reporting 0 </p> | <p>0 = Pulse Dial
1 = DTMF Dial
2 = Pulse Dial, CS on Watts Line
3 = DTMF Dial, CS on Watts Line</p> <p>0 = Radionics
1 = Sescoa</p> <p>0 = No
1 = Yes</p> <p>0 = None
1 = 24 Hours
2 = Weekly</p> | |
| <p><u>To Primary Phone</u>
0 = All Reports
1 = Alarms, Restore, Cancel
2 = All Reports except Open/Close, Test
3 = Alarms, Restore, Cancel
4 = All Reports except Open/Close, Test
5 = All Reports (Dual Reporting)</p> <p><i>The following values are only available with very new 4110DL's, use 6 if programming Pagers</i>
6 = All reports except Open/Close
7 = All reports
8 = All reports
9 = All reports except Open/Close</p> | <p><u>To Secondary Phone</u>
Backup only
All Other Reports
Open/Close, Test
All Reports
All Reports
All Reports</p> <p>Alarms, Open/Close, Troubles
Alarms, Troubles
Alarms, Open/Close, Troubles
Alarms, Open/Close for Users 5-25, Troubles</p> | |
| <p>*50 Keypad Medical/Fire 1 1 & *
 1 3 & #</p> <p>*51 Zone 1 Report Code 1 0 </p> <p>*52 Zone 2 Report Code 1 0 </p> <p>*53 Zone 3 Report Code 1 0 </p> <p>*54 Zone 4 Report Code 1 0 </p> <p>*55 Zone 5 Report Code 1 0 </p> <p>*56 Zone 6 Report Code 1 0 </p> <p>*57 Zone 7 Police Panic Report Code 1 0 </p> <p>*58 Zone 8 Duress Report Code 1 0 </p> <p>*59 Zone 9 Tamper Report Code 0 0 </p> <p>*60 Trouble Report Code 1 0 </p> <p>*61 Bypass Report Code 0 0 </p> <p>*62 AC Loss Report Code 1 0 </p> <p>*63 Low Bat Report Code 1 0 </p> <p>*64 Test Report Code 0 0 </p> <p>*65 Open Report Code 0 </p> <p>*66 Close Report Code 0 </p> <p>*68 Cancel Report Code 1 0 </p> <p>*69 Group Restores Trouble/Bypass 0 </p> <p>*70 Alarm Restore Code 0 </p> <p>*71 Trouble Restore Code 0 0 </p> <p>*72 Bypass Restore Code 0 0 </p> <p>*73 AC Restore Code 0 0 </p> <p>*74 Low Bat Rest Code 0 0 </p> <p>*93 Reports Per Armed Period 0 </p> | <p>(Silent, sends 95, use as Medical Panic)
(Audible, sends 96, use as Fire Panic)</p> | |
| | <p>0 = 10 Reports
1 = Unlimited</p> | |

Ademco 4110DL/First Alert FA110C Program Sheet

*94 Download Phone Number	1 8 0 0 6 8 2 1 6 9 0
*95 Ring Count	# 15 0 to #15 #15 = Answer Machine Defeat
*96 Reinitialize Download	(No Value needed, keypad will beep, <u>VERY</u> important you do this first!)
*97 Default Panel	(No Value needed, keypad will beep and panel will default to factory)
*98 Exits Program Mode	(Will not allow re-entry with Installer Code + 8 + 0 + 0)
*99 Exits Program Mode	(Will allow re-entry with Code + 8 + 0 + 0)

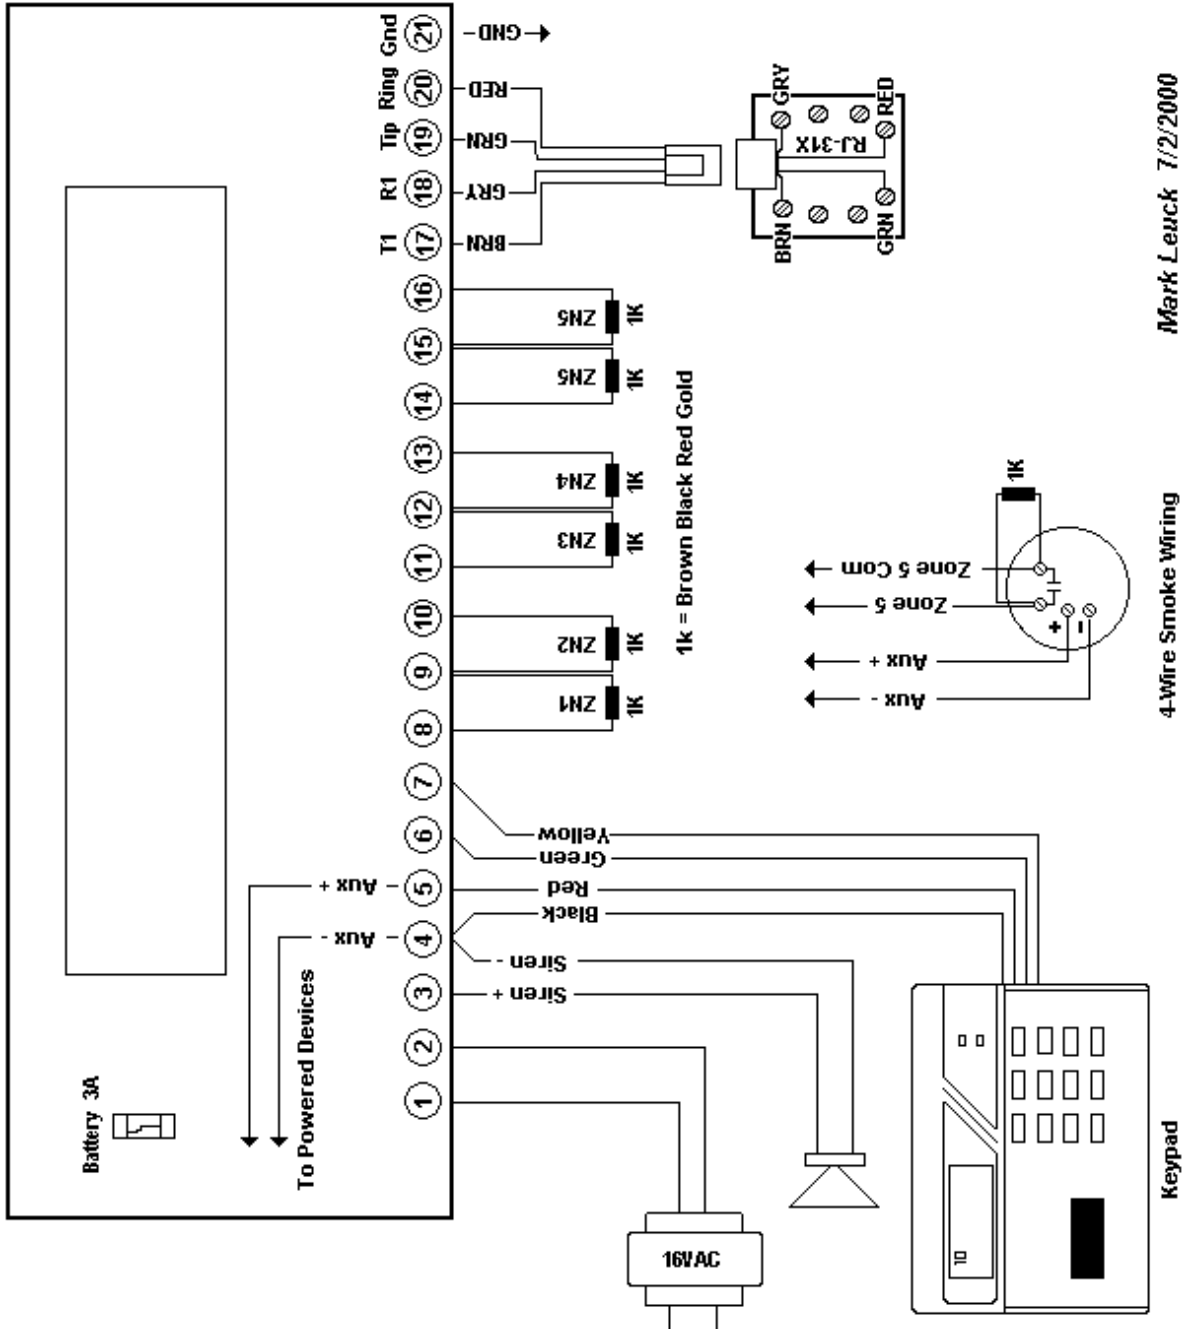

Monitronics Monitoring and Service: 1-800-447-9239

Ademco 4110DL/First Alert FA-110C Quick Reference Guide

Arm Away	User Code + AWAY (2), the ARM light will turn on and the display will show AWAY <i>Note:</i> If system shows NOT READY press * to view open zones
Arm Stay	User Code + STAY (3), the ARM light will turn on and the display will show STAY
Disarming / Silencing Alarms	User Code + OFF (1) If turning off an alarm enter User Code + OFF (1) again to clear display
Instant Doors	User Code + INSTANT (7) to arm system All Entry/Exit doors will arm with no entry delay and all motion or interior zones will be bypassed (The Exit Delay is still active with this command)
Zone Bypassing	User Code + BYPASS key (6) + Zone (01, 02, 03 ...). The display will show BYPASS and the zone bypassed <i>Note:</i> Fire/Smoke Detector Zones cannot be bypassed
User Codes	1. MASTER CODE + CODE key (8) 2. Enter User program (2 to 7) 3. Enter desired User Code To delete a User Code 1. MASTER CODE + CODE key (8) 2. Enter User to delete (2 to 7) then wait 3. After 3 seconds the keypad will beep and erase the code <i>Note:</i> Master Code can only be changed by Service Technician or Remote Downloading (Older systems may only have Users 2 to 5) (System will beep once when completed)
Door Chimes	User Code + CHIME (9), if activated the display will show CHIME
Trouble Display	NO AC = Loss of AC power to the system LOW BAT = Main panel has a low battery, if LOW BAT appears with a zone number that zone has low battery CHECK = There is a problem with a Zone, fire zone or the main system wireless receiver (if applicable)
Panic Buttons	By holding down a combination of numbers will activate the Police, Fire and Medical Panics Press * and # at same time for Police Panic Press 1 and * at the same time for Fire Panic Press 3 and # at the same time for Medical Panic <i>Note:</i> The Fire and Medical Panics may be reversed or disabled on some systems

Do not pause more than 2 seconds between each keypad or system will ignore above commands