

FBI XL-2P Platinum Program Sheet

- Enter Program** Press CODE key + * + 2468 + 1
- Move to location** Press * + 2 digit location
- Program location** Press # after each digit and move to next location
Example: To program phone number enter 1#8#0#0# etc
- Exit Program** Press STAY
- Default Panel** 1. Short "EEPROM RESET" pins on panel and power up
 OR
 2. Press CODE key + * + 2468 + 1 and hold 1 & 3 at same time
- Hex Program** CODE+1 = A CODE+2 = B CODE+3 = C CODE+4 = D CODE+5 = E CODE+6 = F

***01 Primary Phone (12 Digits)**

	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12

A = End of Phone Number
 B = *
 C = 3 second pause
 D = #
 E = *70C = Disable Call Waiting
 F = *70CC= Disable Call Waiting

***02 Secondary Phone**

	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12

***03 Download Phone (Do not Program)**

	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12

***04 PBX Prefix**

	A	A	A	A	(AAAA = All Disabled)							
	L1	L2	L3	L4								

***05 Account 1**

	L1	L2	L3	L4								

***06 Account 2**

					(Not programmed)							
	L1	L2	L3	L4								

***07 Dialer Information**

	E	5	1	C	(Contact ID Reporting)							
	L1	L2	L3	L4								

- | | |
|--|--|
| <p>L1 CS Dialer 2 Formats</p> <ul style="list-style-type: none"> 0 3x1 Standard Pulse 1 4x1 Standard Pulse 2 3x1 Extended Pulse 3 4x1 Extended Pulse 4 3x1 Partial Extended Pulse 5 4x1 Partial Extended Pulse 6 3x2 Pulse 7 4x2 Pulse 8 FBII Superfast DTMF 9 Ademco 4x1 Express DTMF A Ademco 4x2 Express DTMF E Ademco Contact ID DTMF F Pager Alert DTMF | <p>L2 CS Receiver Type 1</p> <ul style="list-style-type: none"> 0 10PPS 1400Hz FBI, Ademco, Silent Knight 1 20PPS 1400Hz FBI, Ademco, Radionics 2 40PPS 1400Hz FBI 4 10PPS 2300Hz FBI, Radionics 5 20PPS 2300Hz FBI 6 40PPS 2300Hz FBI, Radionics 8 10PPS 1400Hz FBI, Radionics 9 20PPS 1400Hz FBI A 40PPS 1400Hz FBI C 10PPS 2300Hz FBI D 20PPS 2300Hz FBI E 40PPS 2300Hz FBI, Radionics |
|--|--|

- | | |
|---|--|
| <p>L3 Dialer Format/CS Report Type</p> <ul style="list-style-type: none"> 0 Pulse Dial 1 TouchTone 2 European Pulse 3 Superfast TouchTone, Backup Report 4 Dialer Disabled 8 Pulse Dial, Split Report 9 TouchTone, Split Report A European Pulse Dial, Split Report B Superfast TouchTone, Split Report | <p>L4 Swinger/AC Freq/Restores</p> <ul style="list-style-type: none"> 0 No Swinger, 60Hz AC, Restore After Bell 1 No Swinger, 60Hz AC, Restore Follows Loop 2 No Swinger, 50Hz AC, Restore After Bell 3 No Swinger, 50Hz AC, Restore Follows Loop 4 1 Event Swinger, 60Hz AC, Restore After Bell 5 1 Event Swinger, 60Hz AC, Restore Follows Loop 6 1 Event Swinger, 50Hz AC, Restore After Bell 7 1 Event Swinger, 50Hz AC, Restore Follows Loop 8 2 Event Swinger, 60Hz AC, Restore After Bell 9 2 Event Swinger, 60Hz AC, Restore Follows Loop A 2 Event Swinger, 50Hz AC, Restore After Bell B 2 Event Swinger, 50Hz AC, Restore Follows Loop C 3 Event Swinger, 60Hz AC, Restore After Bell D 3 Event Swinger, 60Hz AC, Restore Follows Loop E 3 Event Swinger, 50Hz AC, Restore After Bell F 3 Event Swinger, 50Hz AC, Restore Follows Loop |
|---|--|

FBI XL-2P Platinum Program Sheet

*08 Keypad Conditions

| D | 0 | 6 | 0 |
L1 L2 L3 L4

L1 System Options

- 0 Silent Panic, Silent Aux
- 1 Audible Panic, Silent Aux
- 2 Silent Panic, Audible Aux
- 3 Audible Panic, Audible Aux
- 4 Silent Panic, Silent Aux, Inst Arm
- 5 Audible Panic, Silent Aux, Inst Arm
- 6 Silent Panic, Audible Aux, Inst Arm
- 7 Audible Panic, Audible Aux, Inst Arm
- 8 Silent Panic, Silent Aux, Stay/Inst Arm
- 9 Audible Panic, Silent Aux, Stay/Inst Arm
- A Silent Panic, Audible Aux, Stay/Inst Arm
- B Audible Panic, Audible Aux, Stay/Inst Arm
- C Silent Panic, Silent Aux, Inst Arm, Stay/Inst Arm
- D Audible Panic, Silent Aux, Inst Arm, Stay/Inst Arm
- E Silent Panic, Audible Aux, Inst Arm, Stay/Inst Arm
- F Audible Panic, Audible Aux, Inst Arm, Stay/Inst Arm

L3 Quick Commands

- 0 Quick Commands Disabled
- 1 Quick Force Arm
- 2 Quick Arm
- 3 Quick Force Arm Quick Arm
- 4 User 14 Arm Only
- 5 Quick Force Arm, User 14 Arm Only
- 6 Quick Arm, User 14 Arm Only
- 7 Quick Force Arm, Quick Arm, User 14 Arm Only
- 8 Quick Commands Disabled, All Users Door Strike
- 9 Quick Force Arm, All Users Door Strike
- A Quick Arm, All Users Door Strike
- B Quick Force Arm, Quick Arm, All Users Door Strike
- C Quick Commands Disabled, User 14 Arm Only, All User Door Strike
- D Quick Force Arm, User 14 Arm Only, All User Door Strike
- E Quick Arming, User 14 Arm Only, All User Door Strike
- F Quick Force Arm, Quick Arm, User 14 Arm Only, All User Door Strike

*09 Misc Options 1

| 0 | 0 | 4 | A |
L1 L2 L3 L4

L1 Group Bypass for Zones 1 to 4

- 0 Group Bypassing Disabled
- 1 Zone 1
- 2 Zone 2
- 3 Zone 1, Zone 2
- 4 Zone 3
- 5 Zone 1, Zone 3
- 6 Zone 2, Zone 3
- 7 Zone 1, Zone 2, Zone 3
- 8 Zone 4
- 9 Zone 1, Zone 4
- A Zone 2, Zone 4
- B Zone 1, Zone 2, Zone 4
- C Zone 3, Zone 4
- D Zone 1, Zone 3, Zone 4
- E Zone 2, Zone 3, Zone 4
- F Zone 1, Zone 2, Zone 3, Zone 4

L2 Phone Line Fail Option

- 0 Disable Phone Fail Detection
- 1 30 Sec Phone Fail, Bell on Fail
- 2 30 Sec Phone Fail, Sounder on Fail
- 3 30 Sec Phone Fail, Bell & Sounder on Fail
- 4 60 Sec Phone Fail, Keypad Display Only
- 5 60 Sec Phone Fail, Bell on Fail
- 6 60 Sec Phone Fail, Sounder on Fail
- 7 60 Sec Phone Fail, Bell & Sounder on Fail
- 8 90 Sec Phone Fail
- 9 90 Sec Phone Fail, Bell on Fail
- A 90 Sec Phone Fail, Sounder on Fail
- B 90 Sec Phone Fail, Bell & Sounder on Fail
- C 120 Sec Phone Fail, Keypad Display Only
- D 120 Sec Phone Fail, Bell on Fail
- E 120 Sec Phone Fail, Sounder on Fail
- F 120 Sec Phone Fail, Bell & Sounder on Fail

L4 Auto Arming Options

- 0 Auto Arm Disabled
- 1 Auto Arm Away
- 3 Auto Arm Away, Audible Warning
- 5 Auto Arm Instant
- 7 Auto Arm Instant, Audible Warning
- 9 Auto Arm Stay
- B Auto Arm Stay, Audible Warning
- D Auto Arm Instant/Stay
- F Audible Arm Instant/Stay Audible Warning

L2 Group Bypass for Zones 5 to 8

- 0 Group Bypassing Disabled
- 1 Zone 5
- 2 Zone 6
- 3 Zone 5, Zone 6
- 4 Zone 7
- 5 Zone 5, Zone 7
- 6 Zone 6, Zone 7
- 7 Zone 5, Zone 6, Zone 7
- 8 Zone 8
- 9 Zone 5, Zone 8
- A Zone 6, Zone 8
- B Zone 5, Zone 6, Zone 8
- C Zone 7, Zone 8
- D Zone 5, Zone 7, Zone 8
- E Zone 6, Zone 7, Zone 8
- F Zone 5, Zone 6, Zone 7, Zone 8

FBI XL-2P Platinum Program Sheet

*09 Continued

L3 CS Bypass, Armed Bypass, Bypass

- 0 All Options Disabled
- 1 No CS Bypass Report for Stay
- 2 Auto Stay Keypad
- 3 No CS Bypass for Stay, Auto Stay Keypad
- 4 Armed Bypass Display
- 5 No CS Bypass for Stay, Armed Bypass Display
- 6 Auto Stay Keypad, Armed Bypass Display
- 7 No CS Bypass for Stay, Auto Stay Keypad, Armed Bypass Display
- 8 Bypass 3 Zones Only
- 9 No CS Bypass for Stay, Bypass 3 Zones Only
- A Auto Stay Keypad, Bypass 3 Zones Only
- B No CS Bypass for Stay, Auto Stay Keypad, Bypass 3 Zones Only
- C Armed Bypass Display, Bypass 3 Zones Only
- D No CS Bypass for Stay, Armed Bypass Display Bypass 3 Zones Only
- E Auto Stay Keypad, Armed Bypass Display Bypass 3 Zones Only
- F No CS Bypass Stay, Auto Stay Keypad Arm Bypass Display, Bypass 3 Zns Only

L4 CS Dialer Attempts

- 0 16 Attempts
- 1 1 Attempts
- 2 2 Attempts
- 3 3 Attempts
- 4 4 Attempts
- 5 5 Attempts
- 6 6 Attempts
- 7 7 Attempts
- 8 8 Attempts
- 9 9 Attempts
- A 10 Attempts
- B 11 Attempts
- C 12 Attempts
- D 13 Attempts
- E 14 Attempts
- F 15 Attempts

*10 Bell Timeouts/CS Time

6	F	2	6
L1	L2	L3	L4

L1 Burglary Timeouts

- 1 3 Minutes
- 2 6 Minutes
- 3 9 Minutes
- 4 12 Minutes
- 5 15 Minutes
- 6 18 Minutes
- 7 21 Minutes
- 8 24 Minutes
- 9 27 Minutes
- A 30 Minutes
- B 33 Minutes
- C 36 Minutes
- D 39 Minutes
- E 42 Minutes
- F No Bell Timeout

L2 Fire Timeouts

- 1 3 Minutes
- 2 6 Minutes
- 3 9 Minutes
- 4 12 Minutes
- 5 15 Minutes
- 6 18 Minutes
- 7 21 Minutes
- 8 24 Minutes
- 9 27 Minutes
- A 30 Minutes
- B 33 Minutes
- C 36 Minutes
- D 39 Minutes
- E 42 Minutes
- F No Bell Timeout

L3 Test Time Interval

- 0 Test By Event, 24 Hours
- 1 Test By Event, Weekly
- 2 Test By Event, 27 Days
- 3 Test By Event, 60 Days
- 4 Test By Event, 90 Days
- 5 Test By Time, 24 Hours
- 6 Test By Time, Weekly
- 7 Test By Time, 27 Days
- 8 Test By Time, 60 Days
- 9 Test By Time, 90 Days
- A Test By Event, Test By Time, Weekly
- B Test By Event, Test By Time, 27 Days
- C Test By Event, Test By Time, 60 Days
- D Test By Event, Test By Time, 90 Days
- E Test By Time, 1 Hour
- F Test By Event, 1 Hour

L4 Ring Count, Code to Set Time/Bell Test

- 0 Ring Count 0, Code To Set Time
- 1 Ring Count 5, Code To Set Time
- 2 Ring Count 10, Code To Set Time
- 3 Ring Count 15, Code To Set Time
- 4 Ring Count 0
- 5 Ring Count 5
- 6 Ring Count 10
- 7 Ring Count 15
- 8 Ring Count 0, Code to Set Time, Bell Test on Arm
- 9 Ring Count 5, Code To Set Time, Bell Test on Arm
- A Ring Count 10, Code To Set Time, Bell Test on Arm
- B Ring Count 15, Code To Set Time, Bell Test on Arm
- C Ring Count 0, Bell Test on Arm
- D Ring Count 5, Bell Test on Arm
- E Ring Count 10, Bell Test on Arm
- F Ring Count 15, Bell Test on Arm

FBI XL-2P Platinum Program Sheet

***11 Entry/Exit & Cross Timeouts**

| 6 | 3 | 3 | 3 |
L1 L2 L3 L4

L1 Exit Delay

- 0 4 Minutes 30 Seconds
- 1 10 Seconds
- 2 20 Seconds
- 3 30 Seconds
- 4 40 Seconds
- 5 50 Seconds
- 6 1 Minute
- 7 1 Minute, 10 Seconds
- 8 1 Minute, 20 Seconds
- 9 1 Minute, 30 Seconds
- A 1 Minute, 40 Seconds
- B 1 Minute, 50 Seconds
- C 2 Minutes
- D 2 Minutes, 10 Seconds
- E 2 Minutes, 20 Seconds
- F 2 Minutes, 30 Seconds

L2 Entry Delay 1

- 0 4 Minutes 30 Seconds
- 1 10 Seconds
- 2 20 Seconds
- 3 30 Seconds
- 4 40 Seconds
- 5 50 Seconds
- 6 1 Minute
- 7 1 Minute, 10 Seconds
- 8 1 Minute, 20 Seconds
- 9 1 Minute, 30 Seconds
- A 1 Minute, 40 Seconds
- B 1 Minute, 50 Seconds
- C 2 Minutes
- D 2 Minutes, 10 Seconds
- E 2 Minutes, 20 Seconds
- F 2 Minutes, 30 Seconds

11 L3 Entry Delay 2

- 0 4 Minutes 30 Seconds
- 1 10 Seconds
- 2 20 Seconds
- 3 30 Seconds
- 4 40 Seconds
- 5 50 Seconds
- 6 1 Minute
- 7 1 Minute, 10 Seconds
- 8 1 Minute, 20 Seconds
- 9 1 Minute, 30 Seconds
- A 1 Minute, 40 Seconds
- B 1 Minute, 50 Seconds
- C 2 Minutes
- D 2 Minutes, 10 Seconds
- E 2 Minutes, 20 Seconds
- F 2 Minutes, 30 Seconds

L4 Cross Zone Timeout

- 0 15 Seconds
- 1 30 Seconds
- 2 45 Seconds
- 3 1 Minute
- 4 1 Minute, 15 Seconds
- 5 1 Minute, 30 Seconds
- 6 1 Minute, 45 Seconds
- 7 2 Minutes
- 8 2 Minutes, 15 Seconds
- 9 2 Minutes, 30 Seconds
- A 2 Minutes, 45 Seconds
- B 3 Minutes
- C 3 Minutes, 15 Seconds
- D 3 Minutes, 30 Seconds
- E 3 Minutes, 45 Seconds
- F 4 Minutes

***12 Misc Options 2**

| 8 | 3 | X | X |
L1 L2 L3 L4

(X = Do not program)

L1 LED Extinguish/Tamper, Lockout

- 0 All Options Off
- 1 LED Extinguish
- 2 Keypad P Lockout
- 3 LED Extinguish, KP Lockout
- 4 Stay Dial Delay, Stay Bell Instant
- 5 LED Extinguish, Stay Dial Delay, Stay Bell Instant
- 6 KP Lockout, Stay Dial Delay, Stay Bell Instant
- 7 LED Ext, KP Lockout, Stay Dial Delay, Stay Bell Instant
- 8 All Options Off
- 9 LED Extinguish
- A KP Lockout
- B LED Extinguish, KP Lockout
- C Stay Dialer Delay, Stay Bell Delay
- D LED Extinguish, Stay Dial Delay, Stay Bell Delay
- E KP Lockout, Stay Dial Delay, Stay Bell Delay
- F LED Ext, KP Lockout, Stay Dial Delay, Stay Bell Delay

L2 Siren Driver or Bell Output

- 0 12 Volt Bell Output (Siren Driver Disabled)
- 1 Steady Burg, Steady Fire
- 3 Steady Fire, European Sweep Burg
- 5 Steady Burg, European Sweep Fire
- 7 European Sweep Burg, European Sweep Fire
- B Steady Fire, Sweep Burg
- D Steady Burg, Sweep Fire
- E European Sweep Burg, Sweep Fire
- F Sweep Burg, Sweep Fire

FBI XL-2P Platinum Program Sheet

*13 Triggers 1 & 2

|_|_|_|_|
L1 L2 L3 L4

*14 Triggers 3 & 4

|_|_|_|_|
L1 L2 L3 L4

L1 to L4 Triggers

- | | |
|--|--|
| <ul style="list-style-type: none"> 00 Trigger Disabled 01 Steady follows Burg Bell Timeout 02 Steady follows Fire Bell Timeout 03 2 sec pulse follows Duress Code 04 On w/Keypad Tamper, Off w/code 05 Follows 24 hr Trouble KP Sounder 06 Follows Fire Trouble KP Sounder 07 Follows Day Trouble KP Sounder 08 24 Hr alarm (see botom notes) 09 Keypad Fire (see botom notes) 0A Keypad Medical (see botom note) 0B Keypad Panic (see botom notes) 0C Strobe, follows Arm LED til Disarm 0D Follows AC loss after 15 min delay 0E Follows Low Battery 0F Follows Arming State | <ul style="list-style-type: none"> 10 Follows any Zone Bypassed 11 Follows Entry Time 12 Follows Exit Time 13 Follows Instant Arming state 14 Follows Stay Arming state 15 Follows Ready state 16 5 second pulse of Door Strike Code 17 Follows Communication Failure LED 18 Follows Telephone Line Failure LED 19 Follows Keypad Sounder 1A Ground Start (Trigger 1 only) 1B Glass Break Reset 1C Follows Exit Error 1D Momentary after Auto Test Time 1E Listen In after CS Kissoff |
|--|--|

(Audible = follows Bell; Silent = 2 second pulse)

*15 Auto Arm Time

| 0 | 0 | 0 | 0 |
L1 L2 L3 L4

L1 & L2 Hour of Day 00 - 23

L3 & L4 Minute within Hour 00 - 59

*16 CS Test Time

| 0 | 0 | 0 | 0 |
L1 L2 L3 L4

L1 & L2 Hour of Day 00 - 23

L3 & L4 Minute within Hour 00 - 59

*17 Zone 1 Programming

| ? | ? | ? | ? |
L1 L2 L3 L4

L1 Zone Type Descriptions

- 0 Instant
- 2 Delay E/E
- 3 Delay, Auto Stay Arm
- 4 Interior Follower, Manual Stay Arm
- 5 Interior Follower, Auto & Manual Stay Arm
- 6 Delay E/E, Manual Stay Arm
- 7 Delay E/E, Auto & Manual Stay Arm
- 8 Keyswitch
- 9 24 Hr Trouble
- A 24 Hr Alarm
- E Fire without Verification
- F Fire with Verification

L2 Loop Type/Fast Zone & Entry Timer

- 0 End of Line Resistors, Entry Delay 1
- 1 Normally Open, Entry Delay 1
- 2 Normally Closed, Entry Delay 1
- 4 End of Line Resistors, Fast Zone, Entry Delay 1
- 5 Normally Open, Fast Zone, Entry Delay 1
- 6 Normally Closed, Fast Zone, Entry Delay 1
- 7 Fast Zone
- 8 End of Line Resistors, Entry Delay 2
- 9 Normally Open, Entry Delay 2
- A Normally Closed, Entry Delay 2
- C End of Line Resistors, Fast Zone, Entry Delay 2
- D Normally Open, Fast Zone, Entry Delay 2
- E Normally Closed, Fast Zone, Entry Delay 2

L3 Cross Zone, Bypass & Restore

- 1 Cross Zone
- 2 Bypass
- 3 Cross Zone, Bypass
- 4 Restore
- 5 Cross Zone, Restore
- 6 Bypass, Restore
- 7 Cross Zone, Bypass, Restore

L4 Audible Siren, Silent, Day, Chime Dialer Delay

- 0 Audible Siren (Use for Motions)
- 1 Audible Siren, Day Zone
- 2 Audible Siren, Chime Zone (Use for Door/Windows)
- 3 Audible Siren, Day Zone, Chime Zone
- 4 Silent
- 5 Silent, Day Zone
- 6 Silent, Chime Zone
- 7 Silent, Day Zone, Chime Zone
- 8 Audible Siren, Day Zone, Dialer Delay
- 9 Audible Siren, Day Zone, Chime Zone, Dialer Delay
- A Audible Siren, Chime Zone, Dialer Delay
- B Audible Siren, Day Zone, Chime Zone, Dialer Delay
- C Silent, Dialer Delay
- D Silent, Day Zone, Dialer Delay
- E Silent, Chime Zone, Dialer Delay

FBI XL-2P Platinum Program Sheet

*18 Zone 2 Programming	? ? ? ?
	L1 L2 L3 L4
*19 Zone 3 Programming	? ? ? ?
	L1 L2 L3 L4
*20 Zone 4 Programming	? ? ? ?
	L1 L2 L3 L4
*21 Zone 5 Programming	? ? ? ?
	L1 L2 L3 L4
*22 Zone 6 Programming	? ? ? ?
	L1 L2 L3 L4
*23 Zone 7 Programming	? ? ? ?
	L1 L2 L3 L4
*24 Zone 8 Programming	? ? ? ?
	L1 L2 L3 L4
*25 Zone 1 & 2 Report Code	3 1 3 2
	L1 L2 L3 L4
*26 Zone 3 & 4 Report Code	3 3 3 4
	L1 L2 L3 L4
*27 Zone 5 & 6 Report Code	3 5 3 6
	L1 L2 L3 L4
*28 Zone 7 & 8 Report Code	3 7 3 8
	L1 L2 L3 L4
*29 Ambush/AC Loss Report Codes	7 7 1 1
	L1 L2 L3 L4
*30 Panic/Low Battery Report Codes	6 6 1 1
	L1 L2 L3 L4
*31 Open/Close/Test Report Codes	A A A A
	L1 L2 L3 L4
*32 Cancel/Test Report Codes	1 1 A A
	L1 L2 L3 L4
*33 Bypass/Restore/FireTrouble/Day	A A 1 A
	L1 L2 L3 L4
*34 Keypad Fire/Medical Report Codes	2 2 0 0
	L1 L2 L3 L4
*35 Download & Keypad Tamper	1 1 A A
	L1 L2 L3 L4
*36 Recent Close/Exit Error/Swinger	A A A A
	L1 L2 L3 L4
*00 Installer Code	2 4 6 8
	L1 L2 L3 L4

XL-2 Platinum Systems **MUST** be downloaded to add LCD Keypad Information

FBI XL-2P Platinum Program Sheet

FBI Zone Contact ID Codes (Enter 1st digit of Report Code from below list, 2nd digit is Zone Number)

BURGLARY ZONES		FIRE ZONES	
<u>Use</u>	<u>Receiver Output</u>	<u>Use</u>	<u>Receiver Output</u>
0	122 Silent Panic	0	110 Fire Alarm
1	123 Audible Panic	1	111 Smoke
2	130 Burglary	2	112 Combustion
3	131 Perimeter	3	113 Water Flow
4	132 Interior	4	114 Heat Detector
5	133 24 Hour Alarm	5	115 Pull Station
6	134 Entry/Exit	6	116 Duct
7	135 Day/Night	7	117 Flame
8	136 Outdoor	8	140 General Alarm
9	137 Tamper	9	150 24 Hour Non-Burg
A	140 General Alarm	A	158 High Temperature
B	144 Sensor Tamper	B	159 Low Temperature
C	155 Foil Break	C	200 Fire Supervisory
D	156 Day Trouble	D	201 Low H2O Pressure
		E	202 Low CO
		F	203 Gate Valve Sensor

24 HOUR ZONE ALARM TYPES		24 HOUR ZONE TROUBLE TYPES	
<u>Use</u>	<u>Receiver Output</u>	<u>Use</u>	<u>Receiver Output</u>
0	100 Medical	0	100 Medical
1	101 Pendant Transmitter	1	122 Silent Panic
2	120 Panic Alarm	2	123 Audible Panic
3	122 Silent Panic	3	137 Tamper
4	123 Audible Panic	4	150 24 Hour Non-Burg
5	130 Burglary	5	153 Loss of Heat
6	133 24 Hour Alarm	6	155 Foil Break
7	135 Day/Night	7	156 Day Trouble
8	137 Tamper	8	158 High Temperature
9	140 General Alarm	9	159 Low Temperature
A	150 24 Hour Non-Burg	A	300 System Trouble
B	151 Gas Detected	B	301 AC Loss
C	152 Refrigeration	C	302 Low System Battery
D	153 Loss of Heat	D	310 Ground Fault
E	154 Water Leakage	E	373 Fire Trouble
F	155 Foil Break	F	380 Sensor Trouble

FBI System and Panic Contact ID Codes (Enter 1st digit of Report Code from below list, 2nd digit does not matter)

Ambush/Panic		Bypass	
<u>Use</u>	<u>Receiver Output</u>	<u>Use</u>	<u>Receiver Output</u>
0	100 Medical Alarm	0	570 Zone Bypassed
1	101 Pendant Transmitter	1	571 Fire Zone Bypassed
2	110 Fire Alarm	2	572 24Hr Zone Bypassed
3	111 Smoke	3	573 Burg Zone Bypassed
4	112 Combustion	4	574 Group Bypassed
5	117 Flame		
6	120 Panic Alarm		(These send automatically)
7	121 Duress	137	Keypad Tamper
8	122 Silent Panic	156	Day Trouble
9	123 Audible Panic	301	AC Loss
A	130 Burglary	309	Battery Test Fail
B	133 24Hr Alarm	373	Fire Trouble
C	140 General Alarm	401	Opening/Closing by User
D	150 24Hr Non Burglary	403	Auto Arm
E*	115 Fire Pull Station	406	Cancel on Open
	(E is for XL-2T & XL-20 only)	407	Remote Arm
		408	Quick Arm
		409	Key Switch Zone
		412	Download Code
		457	Exit Error
		459	Recent Close
		575	Swinger Bypass
		602	Periodic Test

Monitronics

Monitoring and Service: 1-800-447-9239

FBI XL-2P Platinum Quick Reference Guide

Arm Away	Enter User Code, ARM light will turn on
Arm Stay	Press STAY + User Code When system is disarmed the motions will return to normal
Arm Instant	Press INSTANT key + User Code or INSTANT + STAY + User Code All zones will return to normal when system is disarmed
Disarming / Silencing Alarms	Enter User Code If disarming after an alarm enter User Code again to clear any Alarm Displays
Zone Bypassing	Press BYPASS key + User Code + Zone to Bypass (1 to 8) To bypass more zones press BYPASS key then any other zone you wish to bypass Bypassed zones will return to normal when you arm then disarm your system
User Codes	Press CODE + Master Code Enter User to add or change (02 to 15) Enter new 4-digit User Code (keypad will beep indicating you have successfully entered the code) To delete a User Code repeat above steps except press * instead of entering a new User Code NOTE: User Code 01 is the Master code, User Code 15 is a Duress/Hostage code (if programmed)
Reset Smoke Detector	Enter User Code then *. The smoke detector will reset after a few seconds
Trouble Indicators	if AC/LB light is OFF the AC power has failed if AC/LB light is FLASHING the backup battery is low and needs to recharge or be replaced
Door Chimes	Press # 6 to enable or disable
Panic Buttons	Press * and # for Police Panic Press 1 and 3 for Medical Panic Press 7 and 9 for Fire Panic (Fire and Medical Panics may not be enabled on some systems)