

Moose Z1100R Program Sheet

There are 2 ways to enter programming (system cannot be locked out)

- Enter Program**
1. Close (Hook) SW-1 switch
 2. Press 9 + 98765 (3 or 4 beeps) + 0 (3 or 4 beeps indicating Program Mode)
OR
 1. Turn off power by black switch bottom left of circuit board
 2. Close (Hook) SW-1 switch and power up (No lights on Keypad)
 3. Press 0, panel beeps indicating Program Mode
(Unhook SW-1 when finished to prevent accidental entry by customer)

Starting Location 3-digit Location + #
(You can only move 1 step forward at a time from starting location, If you want to move to location other than next exit then re-enter programming)

Enter Data Enter 3-digit data then # to save and move to next location

Exit Program Press * twice

Default Program Code Power up panel with SW1 hooked and press 5 9 98765 + *

- Default System**
1. Enter programming with 9 98765 0
 2. Press 0 0 9 (Zone lights should be OFF)
 3. Enter 255 (All Zone lights should turn ON)
 4. Press * exit, power down, wait 10 seconds and power up

-----Misc System Options (Normally leave alone)-----

- 005 Two Digit Arming | 001# | (001 to 255 Disables, 000 = Enables)
- 009 Default Panel | 000# | (000 = Normal, 255 Defaults)
- 013 Code 4 Usage Count | 255# | (001 to 254, 255 = Permanent)
- 017 Access Output Hold Time | 001# | (001 to 255 seconds)

-----MAIN PROGRAMMING STARTS HERE-----

- 022 Zone 1 Definition | 064# | 064 = Delay
- 023 Zone 2 Definition | 072# | 065 = Instant
- 024 Zone 3 Definition | 081# | 066 = Fire
- 025 Zone 4 Definition | 065# | 072 = Delay #2
- 026 Zone 5 Definition | 065# | 081 = PIR
- 027 Zone 6 Definition | 065# | 002 = Medical Panic
- 028 Zone 7 Definition | 065# | 003 = Audible Panic button
- 029 Zone 8 Definition | 065# | 011 = Silent Panic Button
- 030 Exit Delay | 061# | (001 to 255 seconds)
(Even times give Exit Beeps, Odd times do not)
- 031 Entry Delay 1 | 030# | (001 to 255 seconds)
- 032 Entry Delay 2 | 045# | (001 to 255 Seconds)
- 033 Communicator Delay | 001# | (001 to 255 Seconds 000 = Local)
- 034 Burglar Siren Timeout | 006# | (000 to 255 Minutes 000 = No Timeout)
- 035 Fire Siren Timeout | 006# | (000 to 255 Minutes 000 = No Timeout)
- 036 Police Siren Timeout | 006# | (000 to 255 Minutes 000 = No Timeout)
- 037 Medical Timeout | 006# | (000 to 255 Minutes 000 = No Timeout)
- 038 System Configuration | 033# | (Dial Phone 1 and use Extended Format)
- | VALUE | DESCRIPTION |
|-------|--|
| 1 | Communicator Extended Reporting |
| 2 | Communicator Single Round Reporting |
| 4 | Pulsing Burglar Alarm Output on Arming |
| 8 | Siren/Bell 1 Second Test upon arming |
| 16 | Silent Keypad Piezo on Burg activation |
| 32 | Telephone 1 Touchtone dial |
| 64 | Telephone 2 Touchtone dial |
| 128 | Keyswitch change of interior and delay modes |
- 039 Do not Program | # |
- 040 Interior/Delay | 000# | (Motions and Doors arm Normally)

VALUE	INTERIOR	DELAY	
000	ON	ON	<i>Example: for Automatic Interior Bypass and Instant Doors enter 003 in location</i>
001	OFF	ON	
002	ON	OFF	
003	OFF	OFF	

Moose Z1100R Program Sheet

041	Communicator Dial Attempts	008#	(8 Attempts)
042	Telephone 1 Data Format	002#	(3x2 format)
043	Telephone 2 Data Format	002#	(3x2 format)
	001 = Ademco 1400Hz Ack/Kissoff, 1900Hz Data, 10 Baud		
	002 = SESCOA Vertex 2300Hz Ack/Kissoff, 1800Hz Data, 20 Baud		
	003 = Radionics Superfast, 2300Hz Ack/Kissoff, 1800Hz Data, 40 Baud		
	004 = Silent Knight Fast, 1400Hz Ack/Kissoff, 1900Hz Data, 15 Baud		
044	1st Digit of Account Number	00?#	(3 digit Account Number only)
045	2nd Digit of Account Number	00?#	(Program 10 if 0 is in Account)
046	3rd Digit of Account Number	00?#	(A=10, B=11, C=12, D=13, E=14, F=15)
047	Police Panic Audible	255#	(255 = Audible, 000 = Silent)
048	Report Code Zone 1	003#	(Sends 31, second digit is automatic)
049	Report Code Zone 2	003#	(Sends 32, second digit is automatic)
050	Report Code Zone 3	003#	(Sends 33, second digit is automatic)
051	Report Code Zone 4	003#	(Sends 34, second digit is automatic)
052	Report Code Zone 5	003#	(Sends 35, second digit is automatic)
053	Report Code Zone 6	003#	(Sends 36, second digit is automatic)
054	Report Code Zone 7	003#	(Sends 37, second digit is automatic)
055	Report Code Zone 8	003#	(Sends 36, use 001 if Smoke Det for 18)
056	Fire Panic Report Code	001#	(Sends 19)
057	Police Panic Report Code	002#	(Sends 29)
058	Medical Panic Report Code	004#	(Sends 49)
059	Opening Report Code	255#	(255 = No Report)
060	Closing Report Code	255#	(255 = No Report)
061	Bypass Report Code	255#	(255 = No Report)
062	Cancel Report Code	255#	(255 = No Report)
063	Restorals Report Code	255#	(255 = No Report)
064	Fire Trouble Report Code	255#	(255 = No Report)
065	Low Battery Report Code	255#	(255 = No Report)
066	25 Hour Test Report Code	255#	(255 = No Report)
067	Not Used, press # to Bypass	#	
068	Telephone 1 Digit 1	001#	011 = *
069	Telephone 1 Digit 2	008#	012 = #
070	Telephone 1 Digit 3	00?#	013 = 3 Second Pause
071	Telephone 1 Digit 4	00?#	014 = Wait for Dial Tone
072	Telephone 1 Digit 5	00?#	255 = Ends Number
073	Telephone 1 Digit 6	00?#	
074	Telephone 1 Digit 7	00?#	Use 000 for 0 in Phone Number
075	Telephone 1 Digit 8	00?#	
076	Telephone 1 Digit 9	00?#	
077	Telephone 1 Digit 10	00?#	
078	Telephone 1 Digit 11	00?#	
079	Telephone 1 Digit 12	255#	(255 = End of Phone Number)
080	Telephone 1 Digit 13	255#	
081	Telephone 1 Digit 14	255#	
082	Telephone 1 Digit 15	255#	
083	Telephone 1 Digit 16	255#	
084	Telephone 1 Digit 17	255#	
085	Telephone 1 Digit 18	255#	
086	Telephone 1 Digit 19	255#	
087	Telephone 1 Digit 20	255#	
088	Telephone 1 Digit 21	255#	
089	Telephone 1 Digit 22	255#	
090	Telephone 1 Digit 23	255#	
091	Telephone 1 Digit 24	255#	
092	Telephone 1 Digit 25	255#	

Moose Z1100R Program Sheet

093	Telephone 1 Digit 26	255#
094	Telephone 1 Digit 27	255#
095	Telephone 1 Digit 28	255#
096	Telephone 1 Digit 29	255#
097	Telephone 1 Digit 30	255#
098	Telephone 2 Digit 1	255#
099	Telephone 2 Digit 2	255#
100	Telephone 2 Digit 3	255#
101	Telephone 2 Digit 4	255#
102	Telephone 2 Digit 5	255#
103	Telephone 2 Digit 6	255#
104	Telephone 2 Digit 7	255#
105	Telephone 2 Digit 8	255#
106	Telephone 2 Digit 9	255#
107	Telephone 2 Digit 10	255#
108	Telephone 2 Digit 11	255#
109	Telephone 2 Digit 12	255#
110	Telephone 2 Digit 13	255#
111	Telephone 2 Digit 14	255#
112	Telephone 2 Digit 15	255#
113	Telephone 2 Digit 16	255#
114	Telephone 2 Digit 17	255#
115	Telephone 2 Digit 18	255#
116	Telephone 2 Digit 19	255#
117	Telephone 2 Digit 20	255#
118	Telephone 2 Digit 21	255#
119	Telephone 2 Digit 22	255#
120	Telephone 2 Digit 23	255#
121	Telephone 2 Digit 24	255#
122	Telephone 2 Digit 25	255#
123	Telephone 2 Digit 26	255#
124	Telephone 2 Digit 27	255#
125	Telephone 2 Digit 28	255#
126	Telephone 2 Digit 29	255#
127	Telephone 2 Digit 30	255#



(255 = End of Phone Number)

Use 000 for 0 in Phone Number


Press * to exit

Property of Monitronics Inc

Moose Z1100R Program Sheet

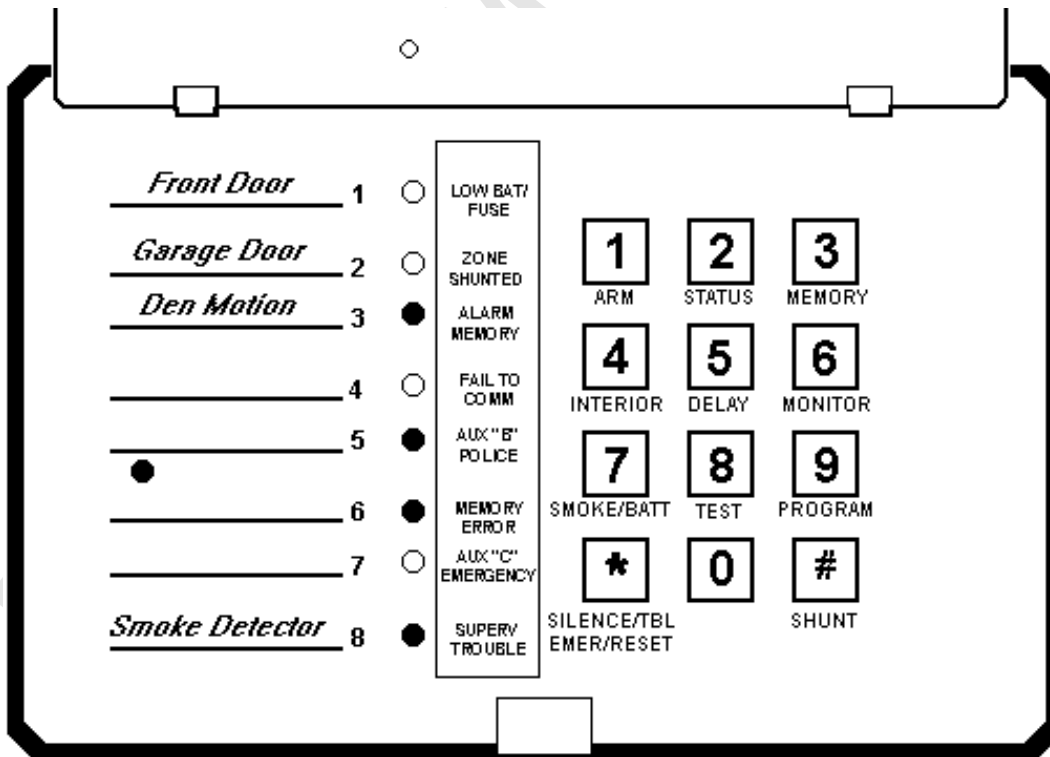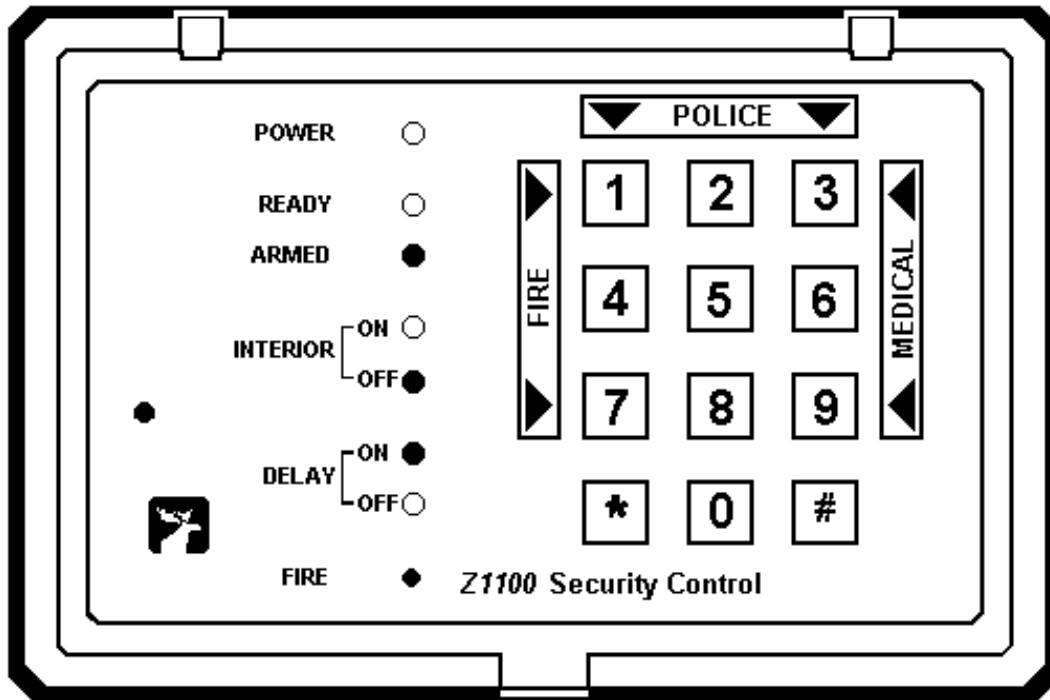

Moose Z1100R Program Sheet

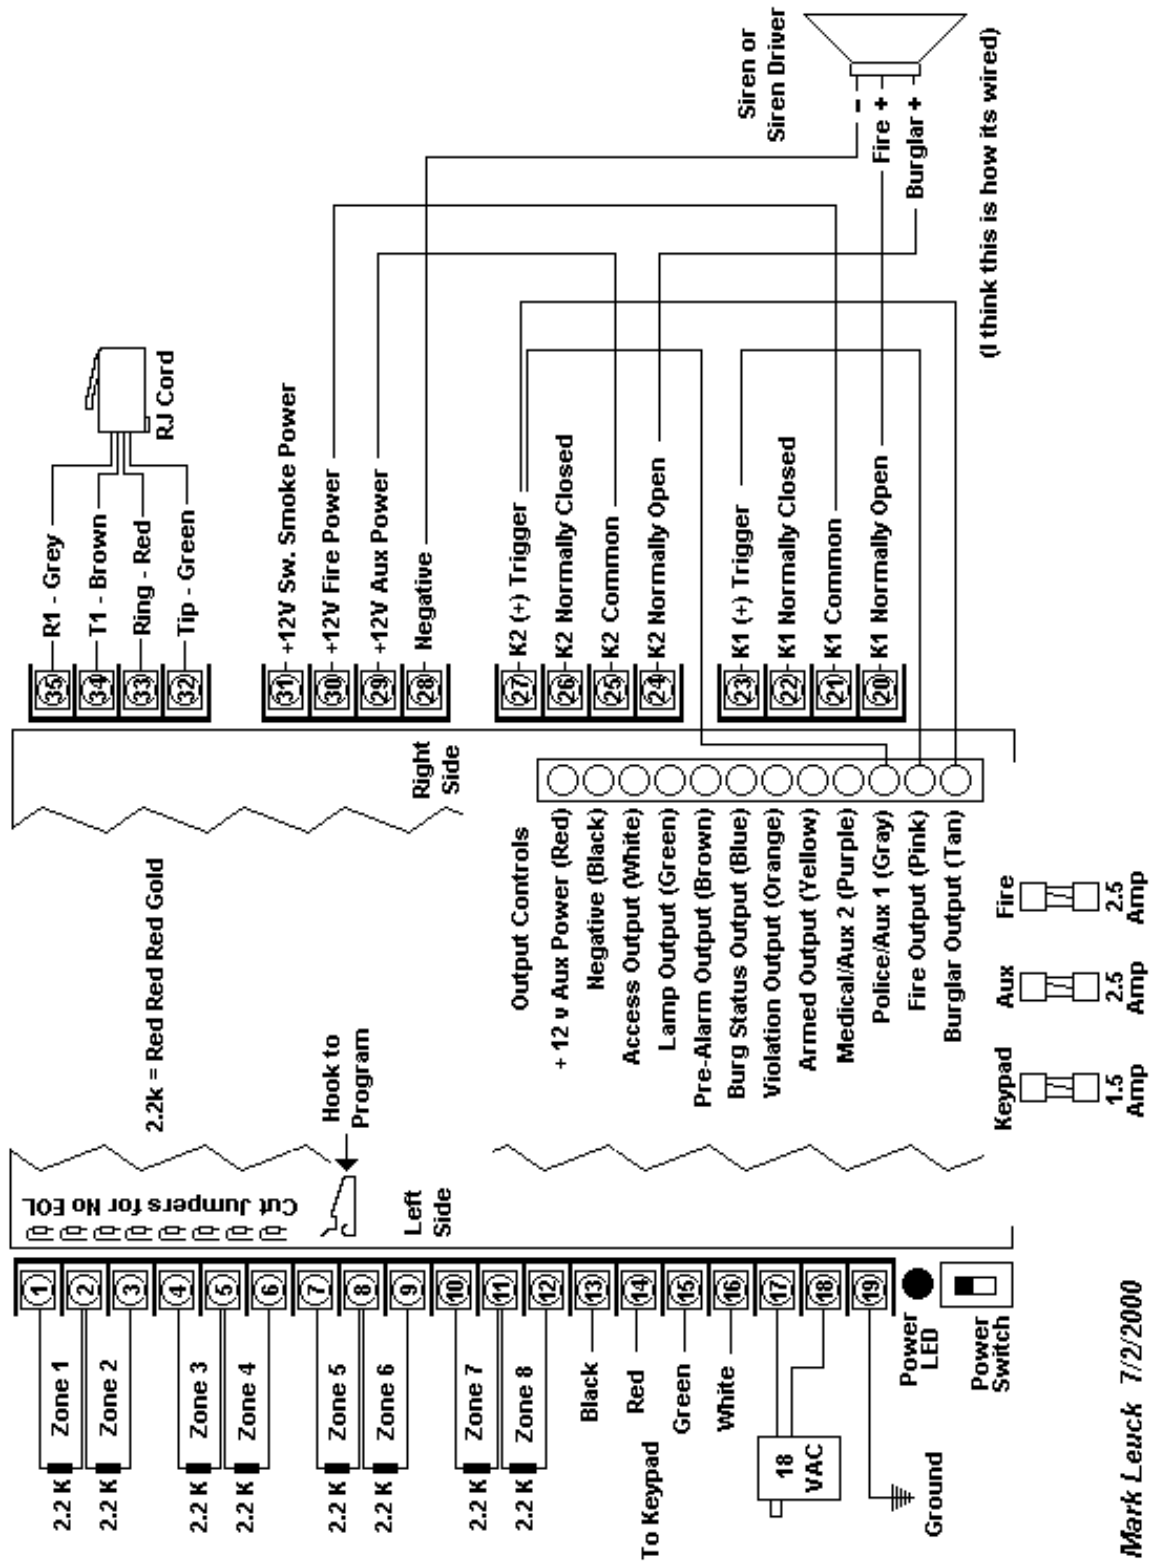

Mark Leuck 7/2/2000

Monitronics Monitoring and Service call 1-800-447-9239

Moose Z1100R Quick Reference Guide

Arm Away	Press 1 + User Code	(The ARM light should turn ON)
Arm Stay	<ol style="list-style-type: none"> 1. Press 4 + User Code to bypass motion detectors 2. Press 1 + User Code to arm system 	
Disarming / Silencing Alarms	<p>1 + User Code, ARM light should turn off, system is disarmed If trouble disarming or to clear display press * key</p>	
Instant Doors	<ol style="list-style-type: none"> 1. 6 + User Code, DELAY light should toggle to OFF 2. 1 + User Code to arm system (All doors return to normal on disarm) 	(Any delay doors will be instant)
Zone Bypassing	# + Zone to bypass [1 to 8] After disarming system press # 9 to remove all bypasses	(READY light will begin flashing)
User Codes (98765 as default code)	<ol style="list-style-type: none"> 1. Press PROGRAM [9] + 98765 2. Enter User to change or add (1 or 4) 3. Press 1 to set as Standard User Code 4. Enter New 4 to 5 digit User Code <p>If code is 4 digits enter 0 at end, however you cannot have 0 within code <i>Example:</i> To change code 2 to 5432 enter 9 + 98765 + 2 + 1 + 54320 <i>Note: Code 1 is Main User Code, Code 4 is a Hostage Code (if enabled)</i></p>	
Door Chimes	Press MONITOR [6] + User Code Repeat above steps to turn chimes off	
Reset Smoke Detector	Pressing SMOKE/BATT [7] + User Code, if keypad FIRE light is flashing press * key to reset	
Trouble Light	<p>Power Light OFF: AC Power has failed and system is operating on Backup Battery Power Light Blinking: Backup Battery has failed Fire Light ON: Fire Zone is in Alarm Fire Light Flashing: Fire Zone is in trouble</p>	