



# FBI XL-3 Program Sheet

**\*06 Keypad Conditions**

| F | 0 | 6 | 3 |  
L1 L2 L3 L4

**L1 Keypad Emergency Conditions**

- 0 Keypad Panics Disabled
- 1 Keypad Panic Enabled
- 2 Keypad Fire Enabled
- 3 Keypad Panic, Fire Enabled
- 4 Keypad Aux Enabled
- 5 Keypad Panic, Aux Enabled
- 6 Keypad Fire, Aux Enabled
- 7 Keypad Panic, Fire, Aux Enabled
- 8 Keypad Panics Disabled, \* (Reset) Enabled
- 9 Keypad Panic, \* (Reset) Enabled
- A Keypad Fire, \* (Reset) Enabled
- B Keypad Panic, Fire, \* (Reset) Enabled
- C Keypad Aux, \* (Reset) Enabled
- D Keypad Panic, Aux, \* (Reset) Enabled
- E Keypad Fire, Aux, \* (Reset) Enabled
- F Keypad Panic, Fire, Aux, \* (Reset) Enabled

**L3 Quick Commands**

- 0 Silent Panic & Aux
- 1 Quick Force Arm/Bypass, Silent Police & Aux
- 2 Quick Arm, Silent Police & Aux
- 3 Quick Force Arm/Bypass, Quick Arm, Silent Police  
Silent Auxiliary Panic
- 4 Audible Police, Silent Aux
- 5 Quick Force Arm/Bypass, Silent Aux,  
Audible Police Panic
- 6 Quick Arm, Audible Police, Silent Aux
- 7 Quick Force Arm, Quick Arm, Audible Police  
Silent Auxiliary Panic
- 8 Silent Police, Audible Aux Panic
- 9 Quick Force Arm/Bypass, Silent Police, Audible Aux
- A Quick Arm, Silent Police, Audible Aux
- B Quick Force Arm/Bypass, Quick Arm,  
Silent Police, Audible Aux
- C Audible Police, Audible Aux
- D Quick Force Arm/Bypass, Audible Aux
- E Quick Arm, Audible Police, Audible Aux
- F Quick Force Arm, Quick Arm, Audible Police  
Audible Aux

**\*07 Misc System Options**

| 3 | 0 | 3 | A |  
L1 L2 L3 L4

**L1 Siren Driver/Bell Output**

- 0 Bell Output (Internal Siren Driver Disabled)
- 1 Steady Burg, Steady Fire
- 3 Euro Sweep Burg, Steady Fire
- 5 Steady Burg, Euro Sweep Fire
- 7 Euro Sweep Burg, Euro Sweep Fire
- B European Sweep Burg, Steady Fire
- D Steady Burg, European Sweep Fire
- F European Sweep Burg, European Sweep Fire
- F Auto Arm INSTANT/STAY, Audible Warning

**L3 User Codes, Bell Lockout, Bell Test**

- 0 Single User Door Strike (User Number 28)
- 1 Arm Only User
- 2 All User Door Strike
- 3 Arm Only User, All Users Door Strike
- 4 Bell Lockout
- 5 Arm Only User, Bell Lockout
- 6 All User Door Strike, Bell Lockout
- 7 Arm Only User, All User Strike, Bell Lockout
- 8 Bell Test
- 9 Arm Only User, Bell Test
- A All User Door Strike, Bell Test
- B Arm Only User, All User Strike, Bell Test
- C Bell Lockout, Bell Test
- D Arm Only User, Bell Lockout, Bell Test
- E All User Door Strike, Bell Lockout, Bell Test

**L2 Phone Line Fail Option**

- 0 Disable Phone Fail Detection
- 1 30 Second Phone Fail, Bell on Fail
- 2 30 Second Phone Fail, Sounder on Fail
- 3 30 Second Phone Fail, Bell & Sounder on Fail
- 4 60 Second Phone Fail
- 5 60 Second Phone Fail, Bell on Fail
- 6 60 Second Phone Fail, Sounder on Fail
- 7 60 Second Phone Fail, Bell & Sounder on Fail
- 8 90 Second Phone Fail
- 9 90 Second Phone Fail, Bell on Fail
- A 90 Second Phone Fail, Sounder on Fail
- B 90 Second Phone Fail, Bell & Sounder on Fail
- C 120 Second Phone Fail
- D 120 Second Phone Fail, Bell on Fail
- E 120 Second Phone Fail, Sounder on Fail
- F 120 Second Phone Fail, Bell & Sounder on Fail

**L4 Misc Options**

- 0 Zn 12 Slow, User Code Req to Set Time
- 1 Zn 12 Slow, Auto-unbypass, Code for Time
- 2 Zn 12 Slow, Bypass Display, Code for Time
- 3 Zn 12 Slow, Bypass Disp, Auto-unbyp, Code for Time
- 4 Zn 12 Fast, User Code Req to Set Time
- 5 Zn 12 Fast, Auto-unbypass, Code Req for Time
- 6 Zn 12 Fast, Bypass Display, Code Req for Time
- 7 Zn 12 Fast, Bypass Display, Auto-unbypass,  
Code Req to Set Time
- 8 Zn 12 Slow, Code Req to Set Time
- 9 Zn 12 Slow, Auto-Unbypass, No Code Req to Set Time
- A Zn 12 Slow, Bypass Display, No Code Req to Set Time
- B Zn 12 Slow, Bypass Display, Auto-unbypass,  
No Code Req to Set Time
- C Zn 12 Fast, No Code Req to Set Time
- D Zn 12 Fast, Auto-unbypass, No Code Req to Set Time
- E Zn 12 Fast, Bypas Display, No Code Req to Set Time
- F Zn 12 Fast, Bypass Display, Auto-unbypass,  
No Code Req to Set Time

**L2 Auto Arming Options**

- 0 Auto Arming Disabled
- 1 Auto Arm AWAY, No Audible Warning
- 3 Auto Arm AWAY, Audible Warning
- 5 Auto Arm INSTANT, No Audible Warning
- 7 Auto Arm INSTANT, Audible Warning
- 9 Auto Arm STAY, No Audible Warning
- B Auto Arm STAY, Audible Warning
- D Auto Arm INSTANT/STAY, No audible Warning

**L4 Number of Rings for Download**

- 0 Remote Downloading Disabled
- 1 1 Ring for Download Answer
- 2 2 Rings for Download Answer
- 3 3 Rings for Download Answer
- 4 4 Rings for Download Answer
- 5 5 Rings for Download Answer
- 6 6 Rings for Download Answer
- 7 7 Rings for Download Answer
- 8 8 Rings for Download Answer
- 9 9 Rings for Download Answer
- A 10 Rings for Download Answer
- B 11 Rings for Download Answer
- C 12 Rings for Download Answer
- D 13 Rings for Download Answer
- E 14 Rings for Download Answer

# FBI XL-3 Program Sheet

\*08 Account 1                   |\_|\_|\_|\_|  
                                  L1 L2 L3 L4

\*09 Account 2                   |\_|\_|\_|\_|                   (Not programmed)  
                                  L1 L2 L3 L4

\*10 System Timeouts           | 3 | 6 | 2 | F |  
                                  L1 L2 L3 L4

**L1 to L4 System Timeouts**

- L1 = Entry Delay       - 1 to F (x10 Second Increments, F=150 seconds)
- L2 = Exit Delay       - 1 to F (x10 Second Increments, F = 150 seconds)
- L3 = Burg Timeout     - 1 to F (x3 Minute Increments, F = Infinite)
- L4 = Fire Timeout     - 1 to F (x3 Minute Increments, F = Infinite)

\*11 Zone 1 Programming       | ? | ? | 3 | 1 |  
                                  L1 L2 L3 L4

\*12 Zone 2 Programming       | ? | ? | 3 | 2 |  
                                  L1 L2 L3 L4

\*13 Zone 3 Programming       | ? | ? | 3 | 3 |  
                                  L1 L2 L3 L4

\*14 Zone 4 Programming       | ? | ? | 3 | 4 |  
                                  L1 L2 L3 L4

\*15 Zone 5 Programming       | ? | ? | 3 | 5 |  
                                  L1 L2 L3 L4

\*16 Zone 6 Programming       | ? | ? | 3 | 6 |  
                                  L1 L2 L3 L4

\*17 Zone 7 Programming       | ? | ? | 3 | 7 |  
                                  L1 L2 L3 L4

\*18 Zone 8 Programming       | ? | ? | 3 | 8 |  
                                  L1 L2 L3 L4

\*19 Zone 9 Programming       | ? | ? | 3 | 9 |  
                                  L1 L2 L3 L4

\*20 Zone 10 Programming       | ? | ? | 3 | A |  
                                  L1 L2 L3 L4

\*21 Zone 11 Programming       | ? | ? | 3 | B |  
                                  L1 L2 L3 L4

\*22 Zone 12 Programming       | ? | ? | 3 | C |  
                                  L1 L2 L3 L4

**L1 Zone Supervision Type**

- 0 EOL Supervised INTERIOR Zone
- 1 Normally Open (N/O) INTERIOR Zone
- 2 Normally Closed (N/C) INTERIOR Zone
  
- 4 EOL Supervised INSTANT Zone
- 5 Normally Open (N/O) INSTANT Zone
- 6 Normally Closed (N/C) INSTANT Zone
  
- 8 EOL Supervised 24hr Zone or Keyswitch
- 9 Normally Open (N/O) 24hr Zone or Keyswitch
- A Normally Closed (N/C) 24hr Zone or Keyswitch
  
- C EOL Supervised DELAY Zone
- D Normally Open (N/O) DELAY Zone
- E Normally Closed (N/C) DELAY Zone

**L2 Zone Type**

- 0 Burg Zone (No Other Options)
- 1 Restore
- 2 Day Zone
- 3 Restore, Day Zone
- 4 Chime
- 5 Restore, Chime
- 6 Day Zone, Chime
- 7 Restore, Day Zone, Chime
- 8 Dialer Delay
- 9 Restore, Dialer Delay
- A Day Zone, Dialer Delay
- B Restore, Day Zone, Dialer Delay
- C Chime, Dialer Delay
- D Restore, Chime Dialer Delay
- E Day Zone, Chime, Dialer Delay
- F Restore, Day, Chime, Dialer Delay

**24 Hour Zones (if using type 8, 9 or A)**

- 0 Audible 24Hr Alarm
- 1 Fire
- 2 Audible 24Hr Trouble
- 3 Keyswitch
- 4 Audible 24Hr Alarm, Restore
- 5 Fire, Restore
- 6 Audible 24Hr Trouble, Restore
- 8 Silent 24Hr Alarm
- A Silent 24Hr Trouble
- C Silent 24Hr Alarm, Restore

1<sup>st</sup> digit is Zone Type, 2<sup>nd</sup> is Report Code




# FBI XL-3 Program Sheet

## FBI XL-3 Zone Contact ID Codes (Enter as 1<sup>st</sup> digit of Report Code)

BURGLARY ZONES		FIRE ZONES		DAY/FIRE ZONES	
Use	Receiver Output	Use	Receiver Output	Use	Receiver Output
0	122 Silent Panic	0	110 Fire Alarm	0	133 24 Hour Alarm
1	123 Audible Panic	1	111 Smoke	1	135 Day/Night
2	130 Burglary	2	112 Combustion	2	137 Tamper
3	131 Perimeter	3	113 Water Flow	3	150 24 Hour Non-Burg
4	132 Interior	4	114 Heat Detector	4	155 Foil Break
5	133 24 Hour Alarm	5	115 Pull Station	5	300 System Trouble
6	134 Entry/Exit	6	116 Duct	6	Trouble
7	135 Day/Night	7	117 Flame	(Above is for XL-3 Only)	
8	136 Outdoor	8	140 General Alarm		
9	137 Tamper	9	150 24 Hour Non-Burg		
A	140 General Alarm	A	158 High Temperature		
B	144 Sensor Tamper	B	159 Low Temperature		
C	155 Foil Break	C	200 Fire Supervisory		
D	156 Day Trouble	D	201 Low H2O Pressure		
		E	202 Low CO		
		F	203 Gate Valve Sensor		
24 HOUR ZONE ALARM TYPES		24 HOUR ZONE TROUBLE TYPES			
Use	Receiver Output	Use	Receiver Output		
0	100 Medical	0	100 Medical		
1	101 Pendant Transmitter	1	122 Silent Panic		
2	120 Panic Alarm	2	123 Audible Panic		
3	122 Silent Panic	3	137 Tamper		
4	123 Audible Panic	4	150 24 Hour Non-Burg		
5	130 Burglary	5	153 Loss of Heat		
6	133 24 Hour Alarm	6	155 Foil Break		
7	135 Day/Night	7	156 Day Trouble		
8	137 Tamper	8	158 High Temperature		
9	140 General Alarm	9	159 Low Temperature		
A	150 24 Hour Non-Burg	A	300 System Trouble		
B	151 Gas Detected	B	301 AC Loss		
C	152 Refrigeration	C	302 Low System Battery		
D	153 Loss of Heat	D	310 Ground Fault		
E	154 Water Leakage	E	373 Fire Trouble		
F	155 Foil Break	F	380 Sensor Trouble		

FBI System and Panic Contact ID Codes (Enter 1st digit of Report Code from below list, 2nd digit doesn't matter)					
Bypass		Restore/Trouble/Tamper		AC Loss	
Use	Receiver Output	Use	Receiver Output	Use	Receiver Output
0	570 Zone Bypassed	0	133 24Hr Alarm	0	133 24Hr Alarm
1	571 Fire Zone Bypassed	1	135 Day/Night	1	140 General Alarm
2	24Hr Zone Bypassed	2	137 Tamper	2	150 24Hr Non Burg
3	573 Burglary Zone Bypassed	3	150 24Hr Non Burg	3	300 System Trouble
4	574 Group Bypass	4	155 Foil Break	4	301 AC Loss
		5	156 Day Trouble		
		6	300 system Troubles		
9	Cancel	7	373 Fire Trouble		
	406 Cancel By User	8	380 Sensor Trouble		
		9	383 Sensor Tamper		
Ambush/Panics		Open/Close/Cancel		Low Battery	
Use	Receiver Output	Use	Receiver Output	Use	Receiver Output
0	100 Medical Alarm	0	400 Open/Close	0	133 24Hr Alarm
1	101 Pendant Transmitter	1	401 Open/Close by User	1	140 General Alarm
2	110 Fire Alarm	2	402 User Group	2	150 24Hr Non Burglary
3	111 Smoke	3	403 Auto Arm	3	300 System Trouble
4	112 Combustion	4	404 Late To Open/Close	4	302 Low System Battery
5	117 Flame	5	405 Deferred Open/Close	5	309 Battery Test Fail
6	120 Panic Alarm	6	407 Remote Arm Open/Close		
7	121 Duress	7	408 Quick Arm Close		
8	122 Silent Panic	8	409 Keyswitch Open/Close		
9	123 Audible Panic				
A	130 Burglary				
B	133 24Hr Alarm				
C	140 General Alarm				
D	150 24Hr Non Burglary				
Test Codes					
Use	Receiver Output				
0	602 Normal Dialer Test				

# FBI XL-3 Program Sheet

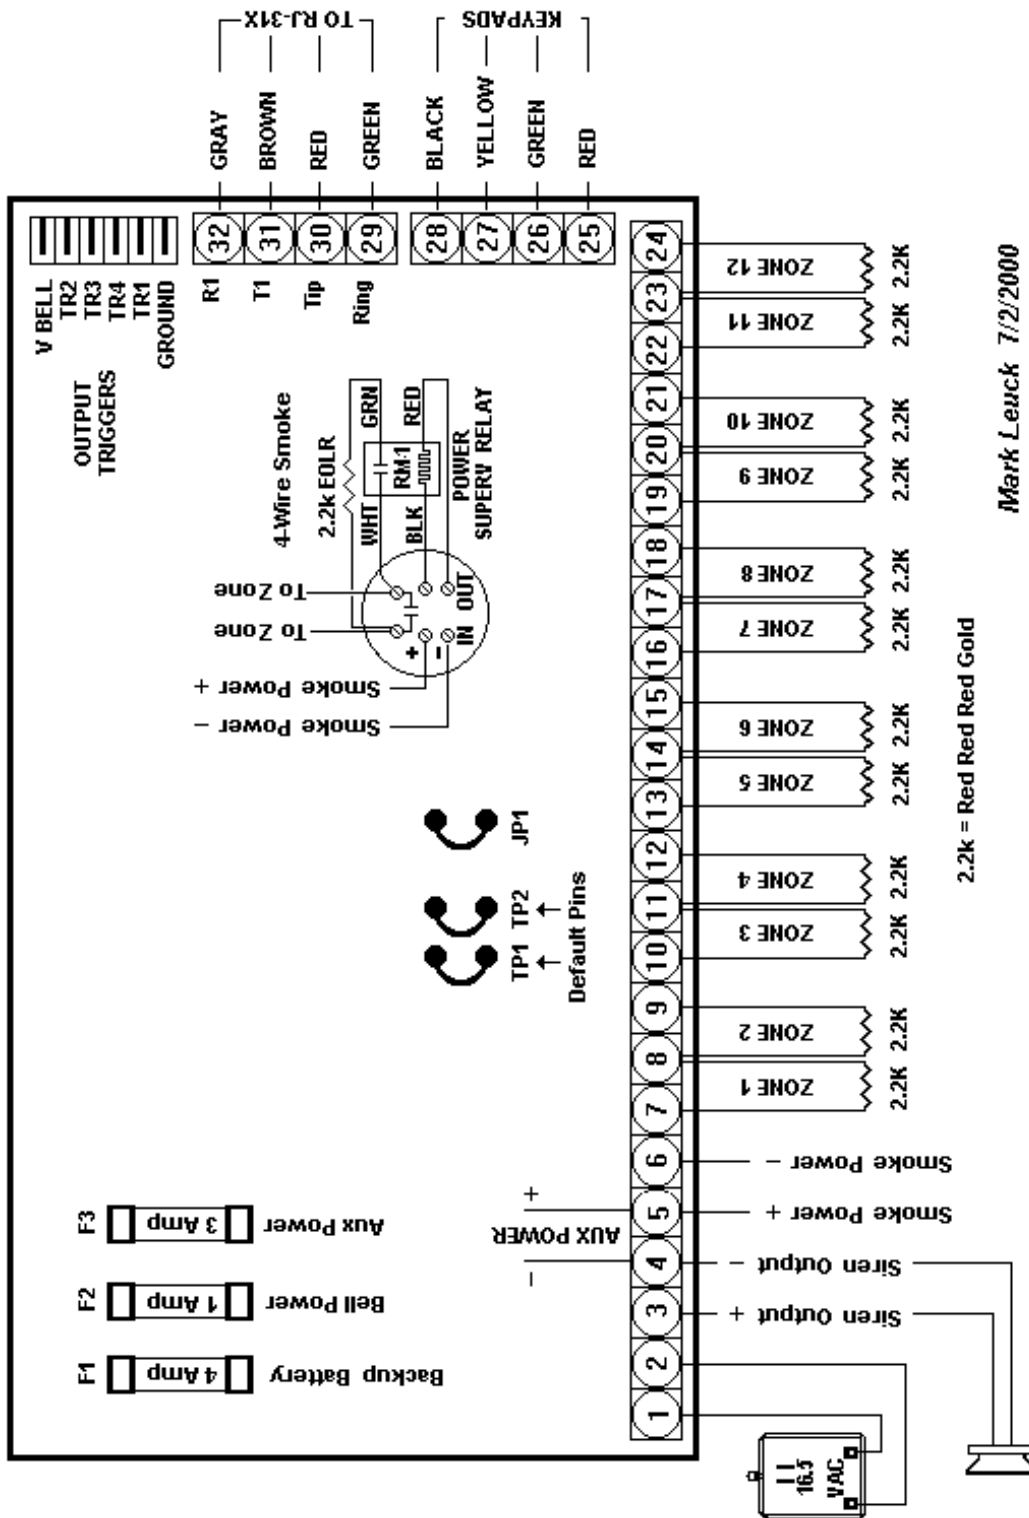

2.2k = Red Red Red Gold  
 Mark Leuck 7/2/2000

# Monitronics Monitoring and Service: 1-800-447-9239

## FBI XL-3 Quick Reference Guide

Arm Away	Enter User Code, ARM light will turn on
Arm Stay	Press STAY + User Code When system is disarmed the motions will return to normal
Arm Instant	Press INSTANT + STAY + User Code All zones will return to normal when system is disarmed
Disarming / Silencing an Alarm	Enter User Code If disarming after an alarm enter User Code again to clear any Alarm Displays
Zone Bypassing	Press BYPASS key + User Code + Zone to Bypass (01 to 12) To bypass more zones press BYPASS key then any other zone you wish to bypass Bypassed zones will return to normal when you arm then disarm your system
User Codes	Press CODE + Master Code Enter User to add or change (02 to 30) Enter new 4-digit User Code (keypad will beep indicating you have successfully entered the code) To delete a User Code repeat above steps except press * instead of entering a new User Code  NOTE: The 1 <sup>st</sup> code is the Master code, the 30 <sup>th</sup> code is a Duress/Hostage code (if programmed)
Reset Smoke Detector	Enter User Code then *. The smoke detector will be reset after a few seconds
Trouble Indicators	if AC/LB light is OFF the AC power has failed if AC/LB light is FLASHING the backup battery is low and needs to recharge or be replaced
Door Chimes	Press # 6 to Enable or Disable
Panic Buttons	Press * and # for Police Panic Press 1 and 3 for Medical Panic (Fire and Medical Panics may not be enabled on some systems) Press 7 and 9 for Fire Panic If keypad has separate Police, Fire and Medical keys press both at same time to use